Emotive Landscapes

How to: Retaining flat block wall

www.emotivelandscapes.co.uk

Prepare

Get: safety gear
Get: equipment, tools and materials

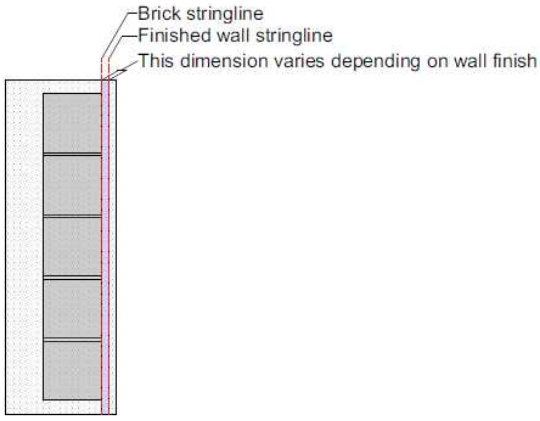

Set out

Use string to set out to finished wall dimensions
Spray footings dimensions
Dig trench for footings

Footings

Pour concrete in to trench or frame
Wait over night for concrete to 'go off'

Construct
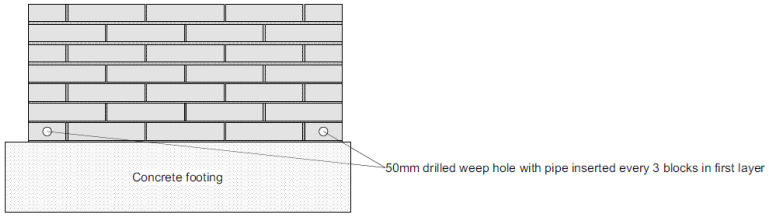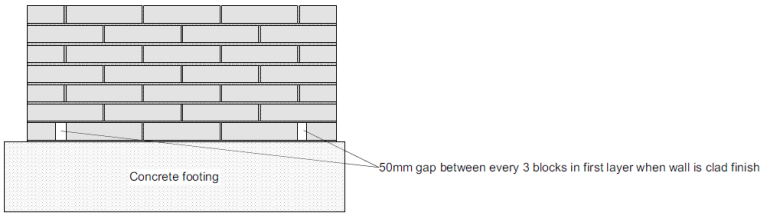
Set out to finished wall dimensions again
Lay in stretcher bond pattern with 10mm joins
Consider finished height, weep holes and brick ties
Check that every brick is level